
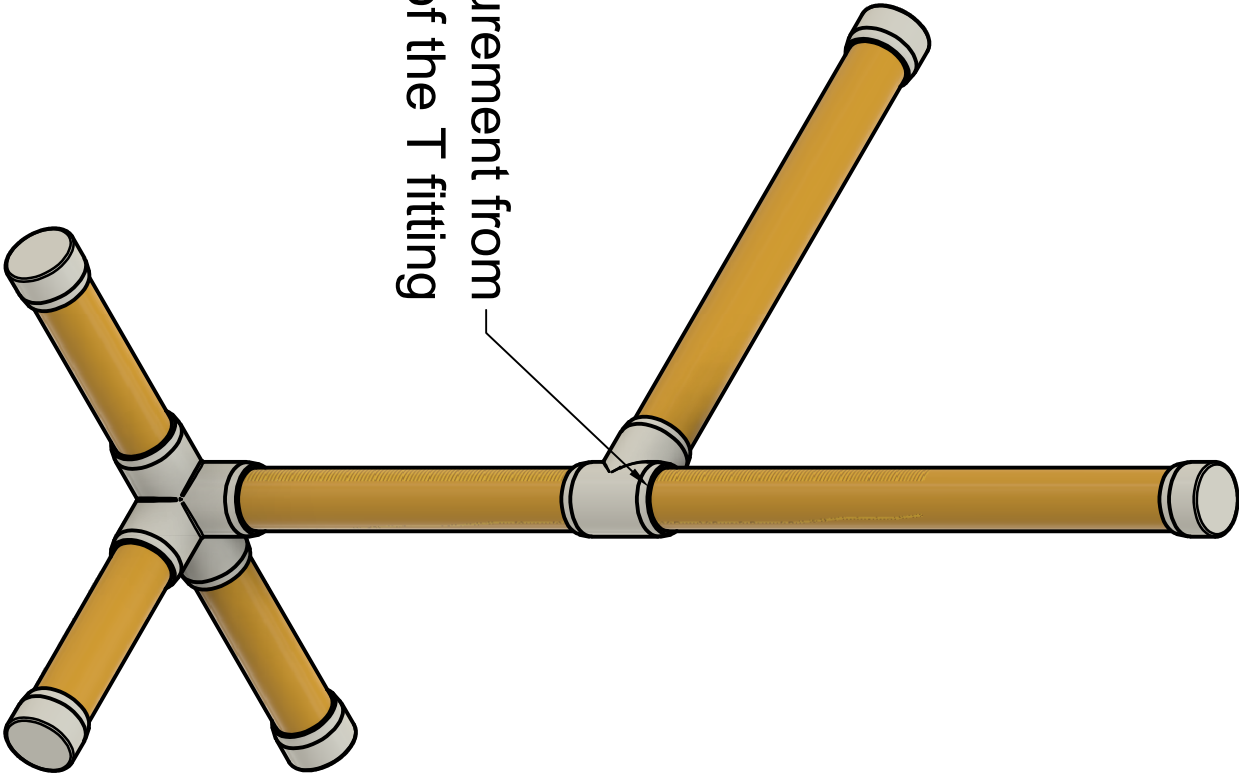


You'll need to remove the top cap before sliding on the measuring bar. It's not been glued, but may be stuck from shipping. Light tapping should be all that's required to remove.

No need for glueing the fittings. Everything's been designed for a light press fit.

Read measurement from top of the T fitting

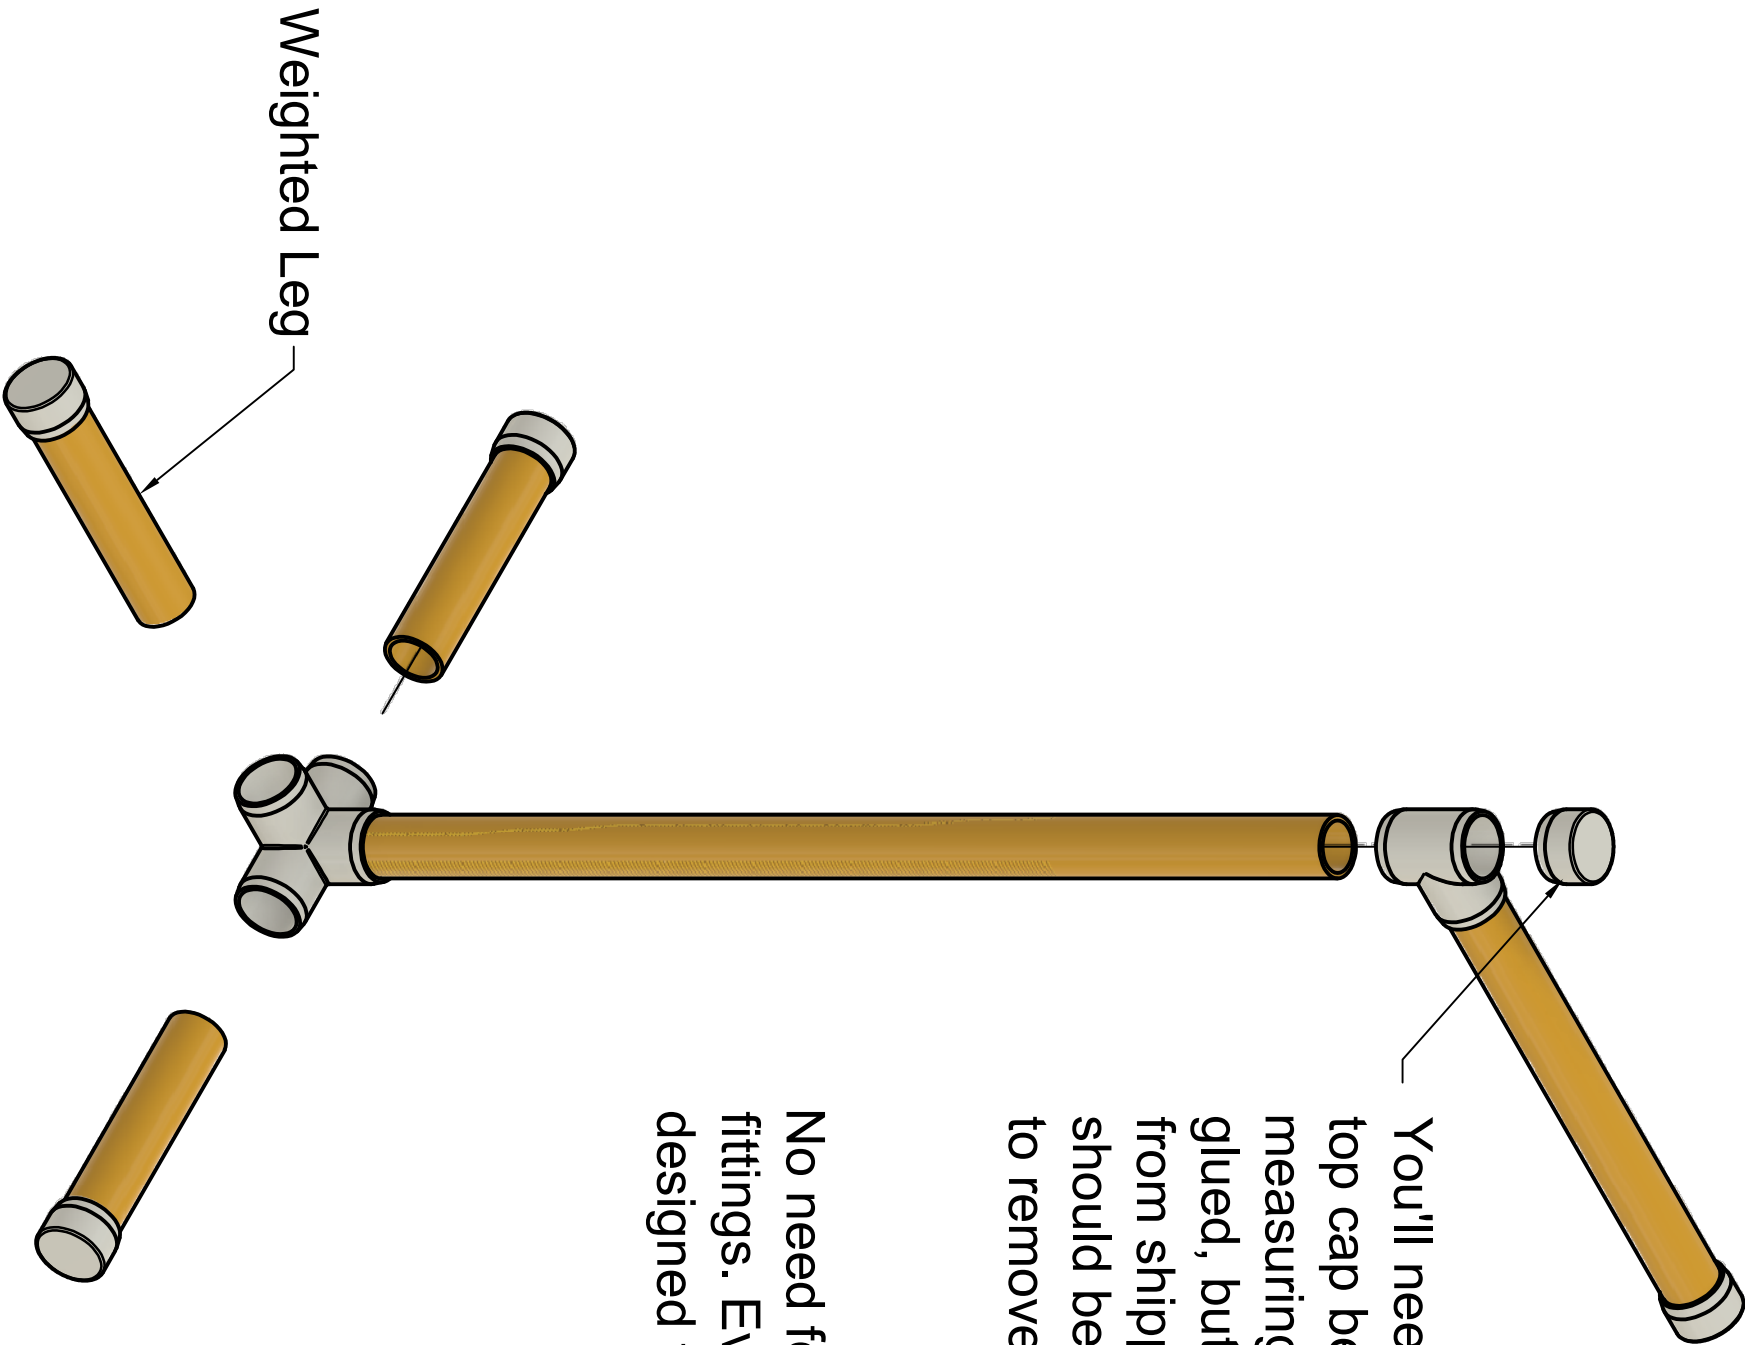

Third Angle Projection					
Tolerances Unless Otherwise Specified				www.K9Einstein.com Refer to CAD Model for Undimensioned Features	
.XXX ±0.001				Geometric Dimensioning	
.XX ±0.01				X ±0.1 & Tolerancing per ANSI	
ANG± 0.5°				Y14.5M-1982	
APPROVED				SIZE	CODE
CHECKED				B	DWG NO
DRAWN				SCALE 1:5	WEIGHT
Troy McConaughy 9/25/2018				SHEET 1/1	

PROJECT

K9Einstein

TITLE

PVC Wicket Assembly Instructions

REV		
-----	--	--